



НАЧИН НА МОНТАЖ НА СИСТЕМИТЕ:

GEMINI 4, GEMINI 10, COMFORT 10, MAXIM 18 Frame, SINGLE 10, TOP 10, TOP 18

**GEMINI 4, GEMINI 10, COMFORT 10,
SINGLE 10, TOP 10**


ВИСОЧИНА НА ВРАТА

$h = H - 40 \text{ mm}$

MAXIM 18 Frame, TOP 18

ВИСОЧИНА НА ВРАТА

$h = H - 38 \text{ mm}$

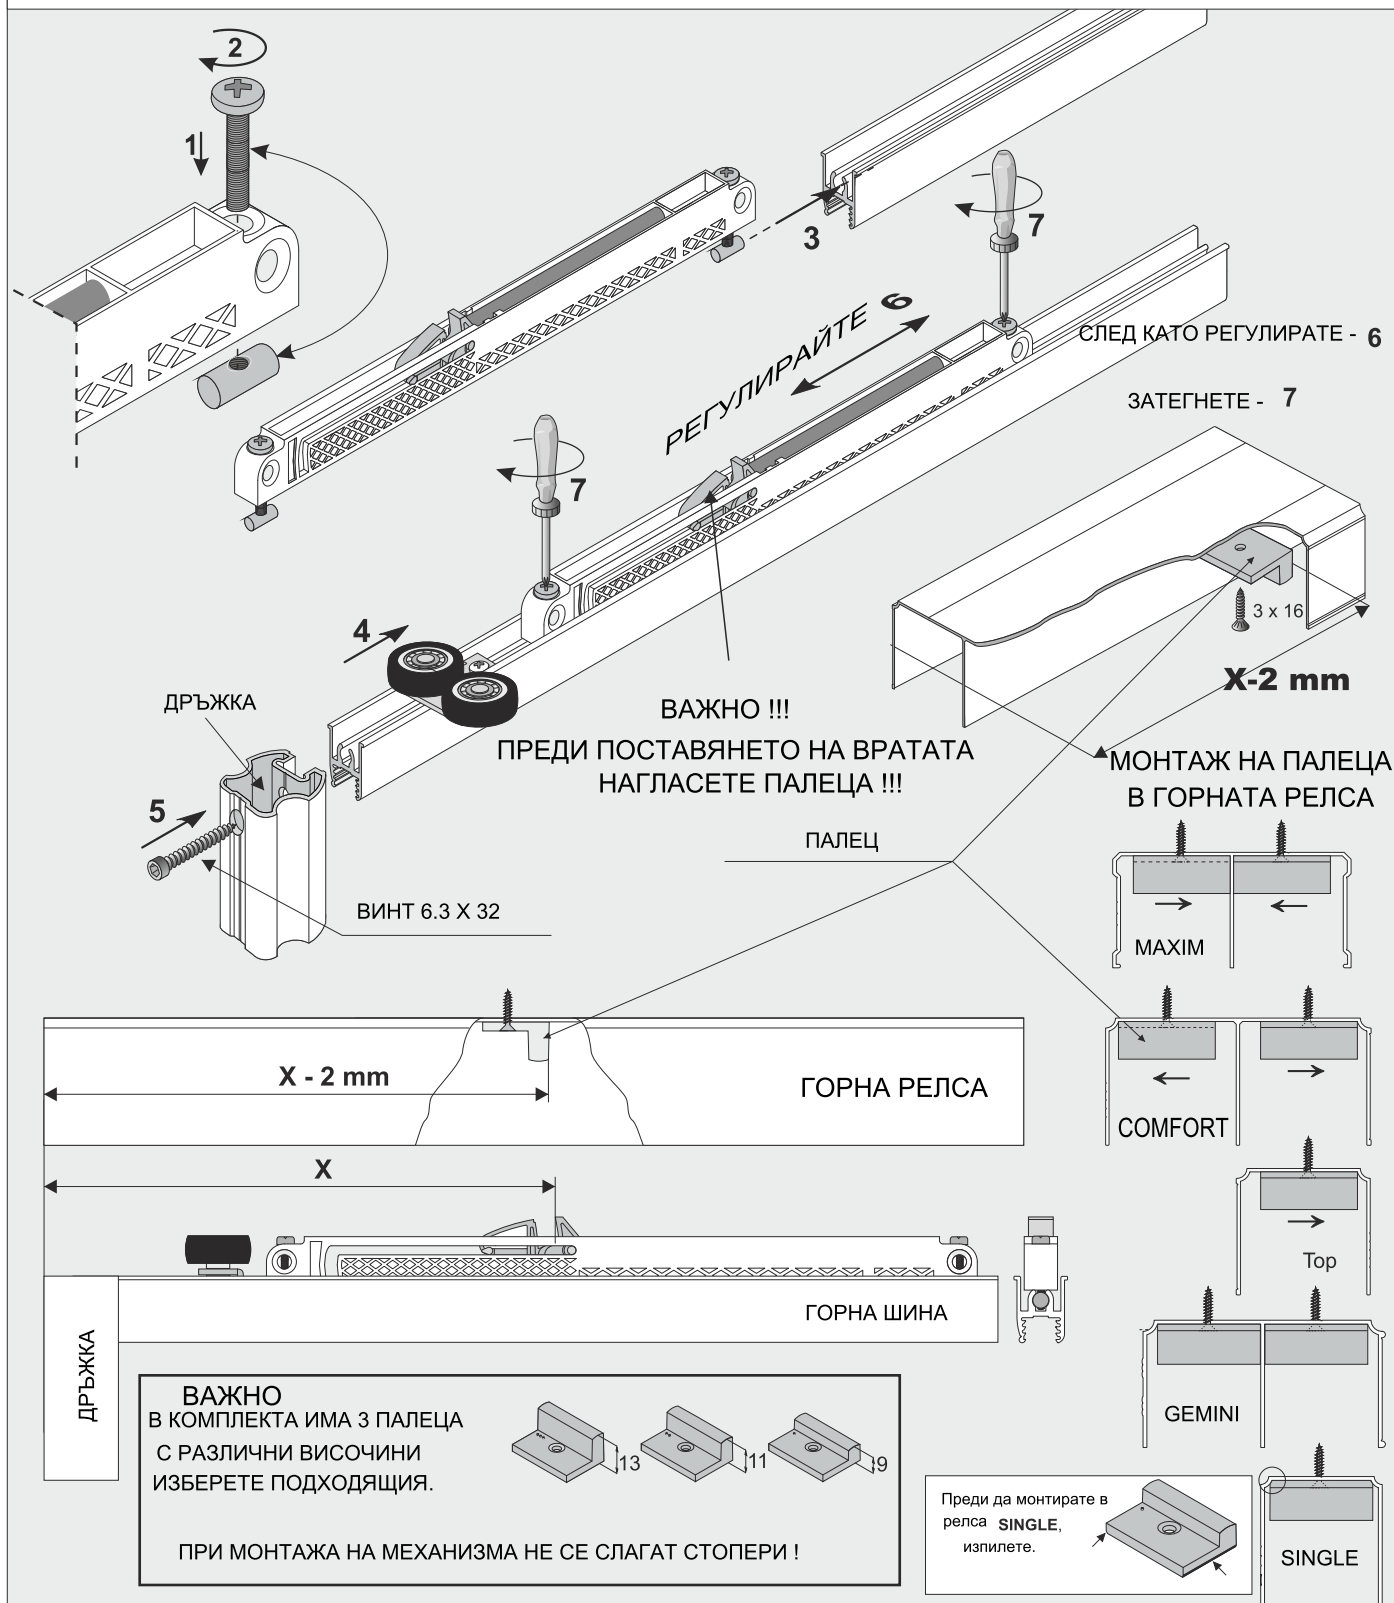

ЕЛЕМЕНТИ

МЕХАНИЗЪМ ЗА ПЛАВНО ЗАТВАРЯНЕ **Sevromatic MINI SV-40 (40 kg) i**



ПОТРОНЧЕ - 4 szt.
ВИНТ 3 X 20 - 4 szt.
ВИНТ 3 X 16 - 2 szt.

ВИНТ 3.5 X 40 - 4 szt.



НАЧИН НА МОНТАЖ НА СИСТЕМИТЕ:
GEMINI 18, COMORT 18, MAXIM 18 Board

GEMINI 18, COMFORT 18,	ВИСОЧИНА НА ВРАТА	$h = H - 42 \text{ mm}$
MAXIM 18 Board	ВИСОЧИНА НА ВРАТА	$h = H - 40 \text{ mm}$

