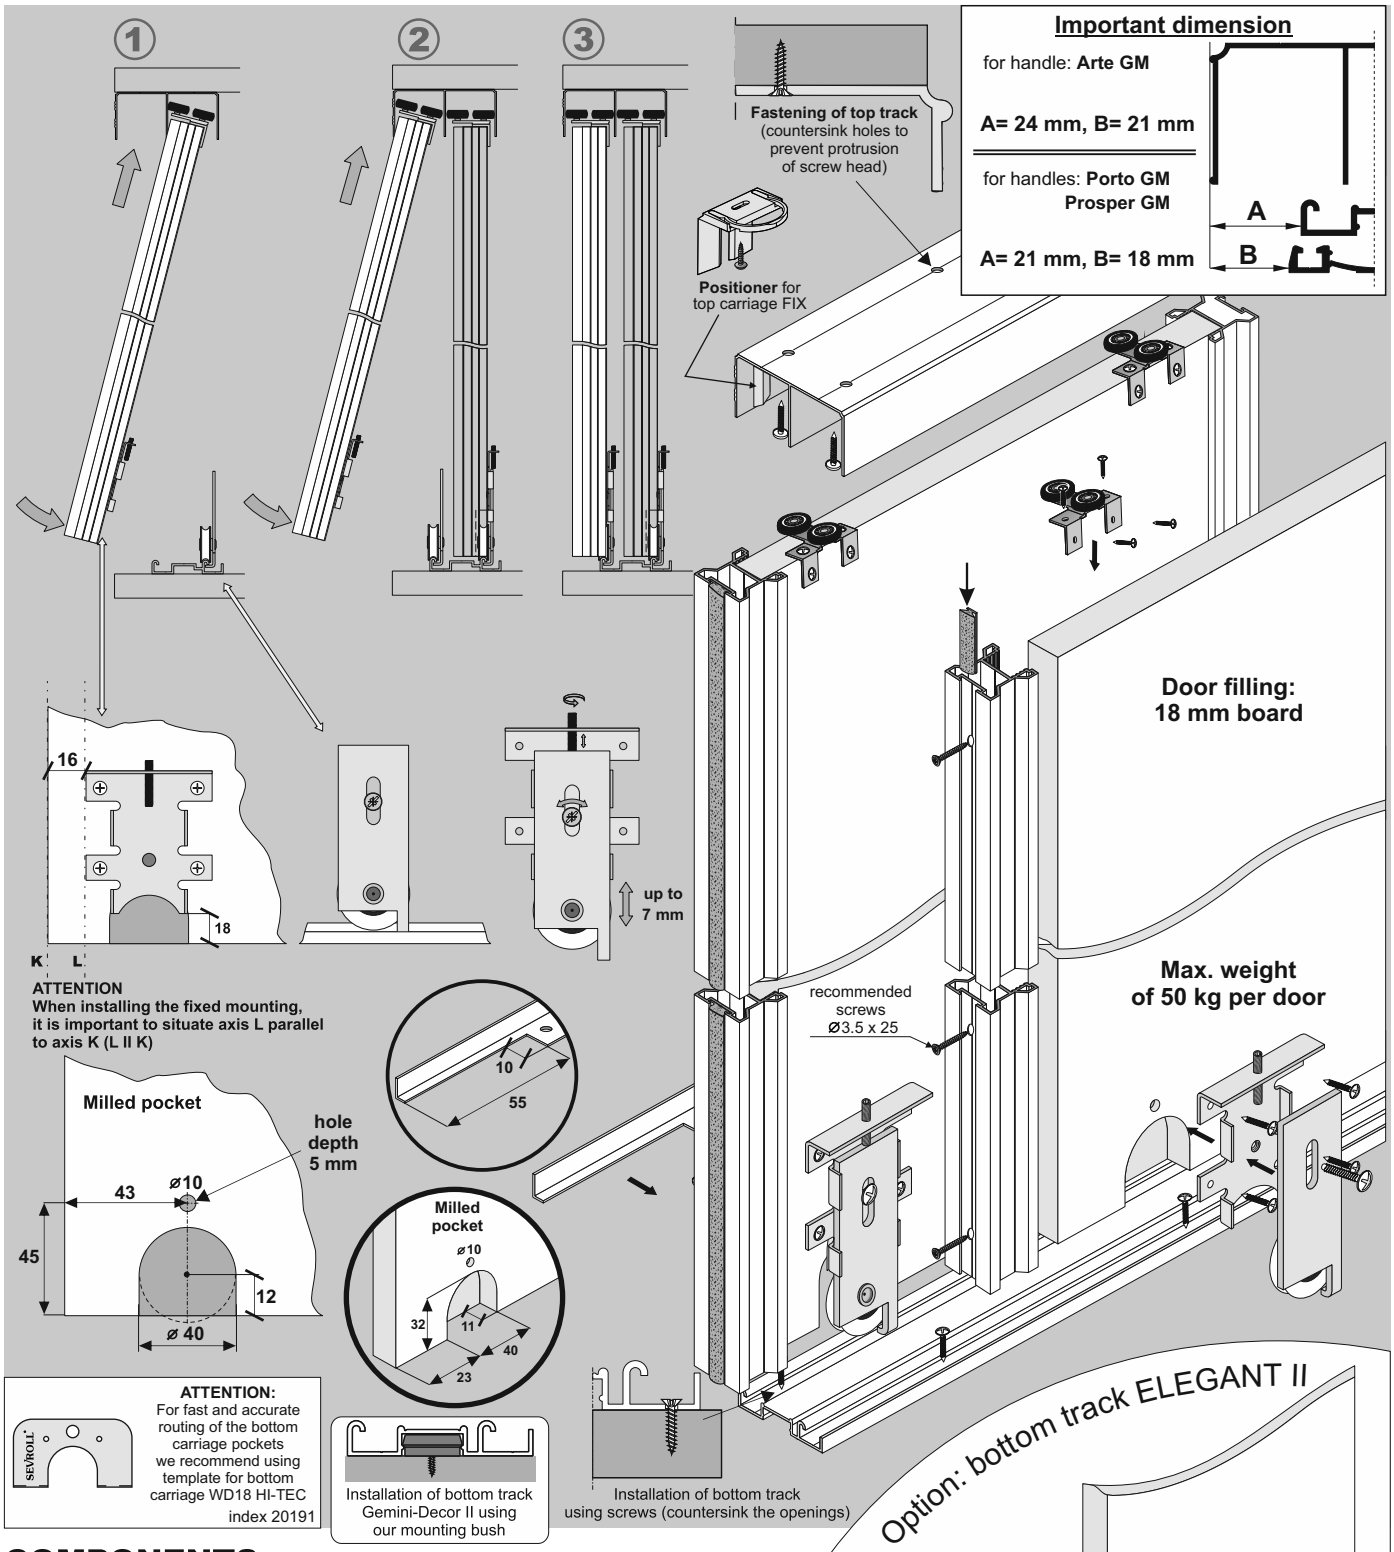


COMPONENTS

Handle

L: 2.70 m
3.00 m
Arte GM
L: 2.70 m
Porto GM
Prosper GM

Top track Gemini-Decor

L: 1.70 m, 2.35 m
3.00 m, 4.05 m
6.00 m
76 mm

Bottom track Gemini-Decor II

L: 1.70 m, 2.35 m
3.00 m, 4.05 m
6.00 m
53 mm

Guiding carriage

GM18 asymmetrical
or
GM18 symmetrical

Angle section

MINI 11 mm x 17 mm
L: 1.70 m,
2.35 m,
3.00 m


K2 Decor
L: 1.70 m,
2.35 m,
3.00 m


Bottom carriage WD18C HI-TEC




Option: bottom track ELEGANT II

With **Arte GM, Porto GM, Prosper GM** sets you may use bottom track ***Elegant II with covering strip*** along with bottom carriage WD18V HI-TEC. **Fitting measurements are not affected.**

Bottom carriage WD18V HI-TEC

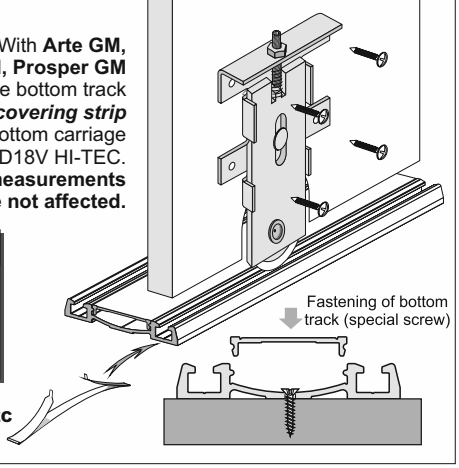


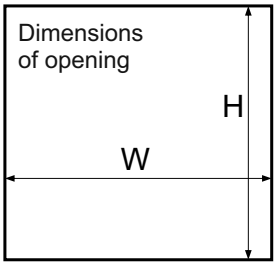


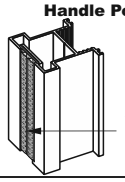		Handle length = door height			
		LINE PORTO GM		**LINE PROSPER GM**	
		Handle Porto GM 	**Guiding carriage GM18 symmetrical** 	**Handle Prosper GM** 	**Guiding carriage GM18 symmetrical** 
door height	- h	h = H - 42 mm		h = H - 42 mm	
door wing height with soft-close fitted		Mini SV25/40/60 SV-25/50	h = H - 42 mm	Mini SV25/40/60 SV-25/50	h = H - 42 mm
		Top SV60/80, Central SV25/40	h = H - 44 mm	Top SV60/80, Central SV25/40	h = H - 44 mm
board height	- hb	hb = h - 2 mm		hb = h - 2 mm	
door width	- w	w = (W - 3 mm + Z) : N		w = (W - 3 mm + Z) : N	
board width	- wb	wb = w - 41 mm		wb = w - 31 mm	
angle section length	- la	la = w - 58 mm		la = w - 48 mm	


number of doors	- N	2	3	4	5	2	3	4	5
total overlap	- Z	30 mm	60 mm	90 mm	120 mm	25 mm	50 mm	75 mm	100 mm

visual design – 4 wings		
door set up	w = (W - 3 + 90) : 4	w = (W - 3 + 75) : 4
door set up	w = (W : 2 + 27) : 2	w = (W : 2 + 22) : 2

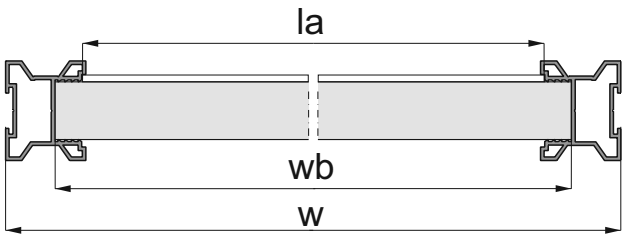

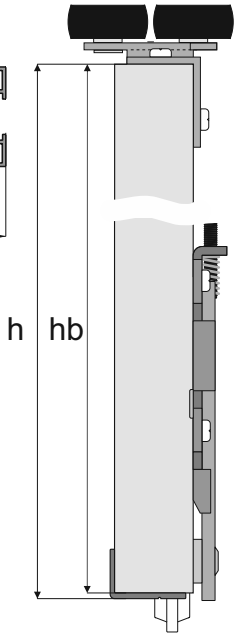


- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws on the inner door face

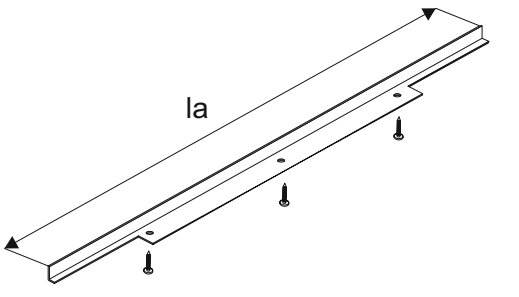


ATTENTION!
Handle profile should be 2 mm longer than board height.


WARNING
SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)


ATTENTION! Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)

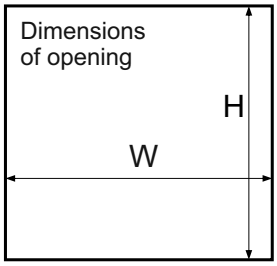


Handle length = door height		
LINE ARTE GM		
Handle Arte GM  anti-dust brushes (inserted) 4.8 mm x 13 mm textile door stop (inserted) 14 mm x 4 mm		**Guiding carriage GM18 asymmetrical**  L/R
door height - h	h = H - 42 mm	
door wing height with soft-close fitted	Mini SV25/40/60 SV-25/50	h = H - 42 mm
	Top SV60/80, Central SV25/40	h = H - 44 mm
board height - hb	hb = h - 2 mm	
door width - w	w = (W - 3 mm + Z) : N	
board width - wb	wb = w - 32 mm	
angle section length - la	la = w - 48 mm	


number of doors - N	2	3	4	5
total overlap - Z	36 mm	72 mm	108 mm	144 mm

visual design – 4 wings	
 door set up	w = (W - 3 + 108) : 4
 door set up	w = (W : 2 + 33) : 2

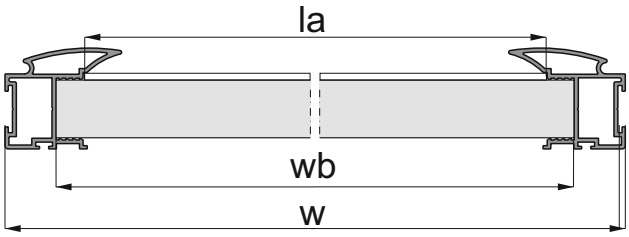

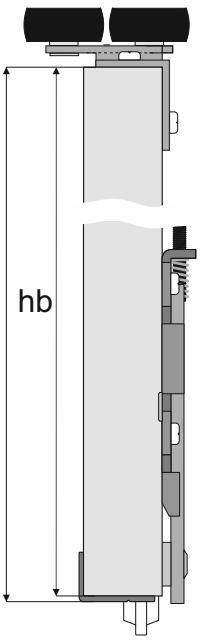

- When fitting handle profiles, do not use assembly adhesive
- The handle should be fixed to board with fastening screws on the inner door face

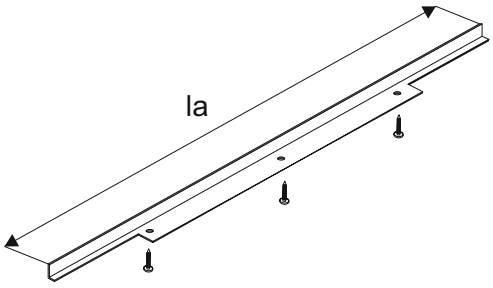

ATTENTION!

Handle profile should be 2 mm longer than board height.

WARNING

SEVROLL does not bear any responsibility for deformation resulting from the application of improper quality of boards (improper storage, improper humidity)

ATTENTION! Remove protective film from aluminium elements (handles, tracks, connectors, etc.) prior to cutting them to the desired size. Film removal will reveal quality issues (eg. scratches)